

Features

- Output voltage: 3.3V, 5V, 12V and adjustable output version
- Adjustable version output voltage range, 1.23V to 37V±4%
- 150Khz +15% fixed switching frequency
- Voltage mode non-synchronous PWM control
- Thermal-shutdown and current-limit protection
- ON/OFF shutdown control input
- Operating voltage can be up to 40V
- Output load current: 5A
- Lead Free packages: TO263-5L and TO220-5L(R)
- Low power standby mode
- Built-in switching transistor on chip
- Lead Free Finish/RoHS Compliant (Note 1)


General Description

The AP1501A series are monolithic ICs that are designed for a step-down DC/DC converter, and possess the ability to drive a 5A load without additional transistor component. Due to reducing the number of external component, the board space can be saved easily. The external shutdown function can be controlled by logic level and then come into standby mode. The internal compensation makes feedback control have good line and load regulation without external design. Regarding protected function, thermal shutdown is to prevent over temperature operating from damage, and current limit is against over current operating of the output switch. The AP1501A series operates at a switching frequency of 150Khz thus allowing smaller sized filter components than what would be needed with lower frequency switching regulators. Other features include a guaranteed +4% tolerance on output voltage under specified input voltage and output load conditions, and ±15% on the oscillator frequency. The output version includes fixed 3.3V, 5V, 12V, and an adjustable type. The packages are available in a standard 5-lead TO263 and TO220 packages.

Applications

- · Simple High-efficiency step-down regulator
- On-card switching regulators
- Positive to negative converter

Ordering Information

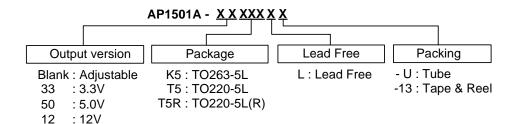


Note: 1. RoHS revision 13.2.2003. Glass and High Temperature Solder Exemptions Applied, see *EU Directive Annex Notes 5 and 7*.

		Package	Packaging	Tube/Bulk		13" Tape and Reel		
	Device	Device Code		Packaging (Note 2) Quantity		Quantity	Part Number Suffix	
Pb	AP1501A-XXK5	K5	TO263-5L	50	Suffix -U	800/Tape & Reel	-13	
P	AP1501A-XXT5	T5	TO220-5L	50	-U	NA	NA	
Pb	AP1501A-XXT5R	T5R	TO220-5L(R)	50	-U	NA	NA	


Note: 2. Pad layout as shown on Diodes Inc. suggested pad layout document AP02001, which can be found on our website at http://www.diodes.com/datasheets/ap02001.pdf.



Pin Assignments

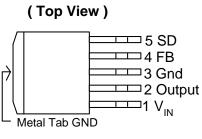

TO263-5L




TO220-5L/TO220-5L(R)

Pin Descriptions

Name	Description			
V _{IN}	Operating voltage input			
Output	Switching output			
Gnd	Ground			
FB Output voltage feedback control				
SD	ON/OFF shutdown			



Block Diagram

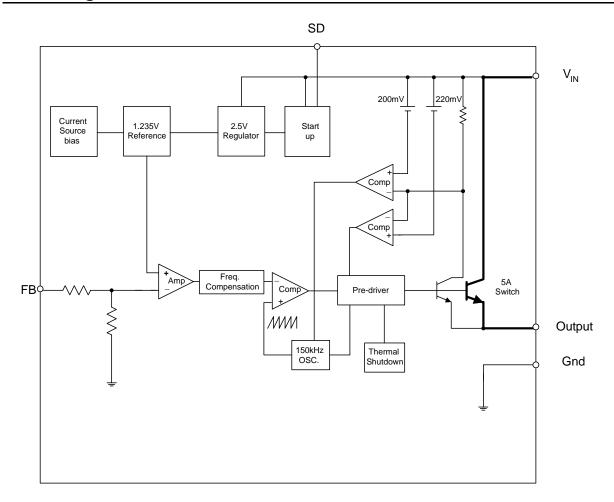

Absolute Maximum Ratings

Symbol	Parameter	Rating	Unit
ESD MM	Machine Model ESD Protection	400	V
V _{CC}	Supply Voltage	+45	V
V _{SD}	ON/OFF Pin input voltage	-0.3 to +40	V
V_{FB}	Feedback Pin voltage	-0.3 to +40	V
V _{OUT}	Output voltage to Ground	-1	V
P_{D}	Power dissipation	Internally limited	W
T _{ST}	Storage temperature	-65 to +150	°C
T_J	Operating Junction Temperature	-20 to +125	°C



Recommended Operating Conditions

Symbol	Parameter	Rating	Units
V _{OP}	Operating voltage	4.5 to 40	V
T _A	Operating Ambient Temperature	-20 to 85	°C

Electrical Characteristics (All Output Voltage Versions)

Unless otherwise specified, V_{IN} = 12V for 3.3V, 5V, adjustable version and V_{IN} = 24V for the 12V version. I_{LOAD} = 0.5A

Symbol	Parameter	Conditions	Min	Тур.	Max	Unit	
I _{FB}	Feedback Bias Current	V _{FB} = 1.3V (Adjustable version only)		40	60 100	nA	
Fosc	Oscillator Frequency		127 110	150	173 173	Khz	
V _{SAT}	Saturation Voltage	I _{OUT} = 5A no outside circuit V _{FB} = 0V force driver on		1.5	1.6 1.7	V	
DC	Max. Duty Cycle(ON) Min. Duty Cycle(OFF)	$V_{FB} = 0V$ force driver on $V_{FB} = 12V$ force driver off		100 0		%	
I _{CL}	Current Limit	peak current no outside circuit V _{FB} = 0 force driver on	5.5	6.0	6.5 7.5	А	
IL	Output = 0V Output Leakage	no outside circuit V _{FB} = 12 force driver off			200	uA	
	Output =-1V Current	$V_{IN} = 40V$		2 5	60	mA	
I _Q	Quiescent Current Standby Quiescent Current	V_{FB} = 12 force driver off ON/OFF pin = 5V V_{IN} = 40V		150	10 250 300	mA uA	
V _{IL}	ON/OFF Pin Logic Input	Low (regulator ON)		J	0.6		
V _{IH}	Threshold Voltage	High (regulator OFF)	2.0	1.3		V	
I _H	ON/OFF Pin Logic Input Current	V _{LOGIC} = 2.5V (OFF)		15	25	uA	
IL	ON/OFF Pin Input Current	$V_{LOGIC} = 0.5V (ON)$		0.02	5	uA	
	Thermal Resistance Junction-to-Ambient	TO263-5L (Note 3)		37		°C/W	
θ_{JA}		TO220-5L(R) (Note 3)		31			
θ _{JC}	Thermal Resistance	TO263-5L (Note 3)		6		°C/W	
OJC	Junction-to-Case	TO220-5L(R) (Note 3)		5]	

Note: 3. Test condition: Device mounted with copper area of approximately 3 in²,1oz, no air flow.



Electrical Characteristics (Continued)


	Symbol Parameter Con-		Conditions	Тур.	Limit	Unit
AP1501A-ADJ	V_{FB}	Output Feedback		1.23	1.193/ 1.18 1.267/ 1.28	V V _{MIN} V _{MAX}
	η	Efficiency	$V_{IN} = 12V$, $I_{LOAD} = 5A$	72		%
AP1501A-3.3V	V _{OUT}	Output Voltage	$5.5V \le V_{IN} \le 40V$ $0.2A \le I_{LOAD} \le 5A$	3.3	3.168/ 3.135 3.432/ 3.465	V V _{MIN} V _{MAX}
	η	Efficiency	$V_{IN} = 12V$, $I_{LOAD} = 5A$	71		%
AP1501A-5V	V _{OUT}	Output Voltage	$8V \le V_{IN} \le 40V$ $0.2A \le I_{LOAD} \le 5A$	5	4.8/ 4.75 5.2/ 5.25	V V _{MIN} V _{MAX}
	η	Efficiency	$V_{IN} = 12V$, $I_{LOAD} = 5A$	78		%
AP1501A-12V	V _{OUT}	Output Voltage	$15V \le V_{IN} \le 40V$ $0.2A \le I_{LOAD} \le 5A$	12	11.52/ 11.4 12.48/ 12.6	V V _{MIN} V _{MAX}
	η	Efficiency	$V_{IN} = 16V$, $I_{LOAD} = 5A$	88		%


Note: 4. Specifications with **boldface type** are for full operating temperature range, the other type are for $T_A = 25^{\circ}C$.





Typical Performance Characteristics


Typical Performance Characteristics Normalized Output Voltage 5.10 V_{IN} =20V, I_{LOAD} =3A OUTPUT VOLTAGE CHANGE Normalized at T_J = 25°C 5.05 5.00 4.95 4.90 -25 75 100 125 -50 0 25 50 JUNCTION TEMPERATURE(°C)

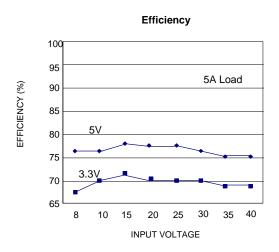

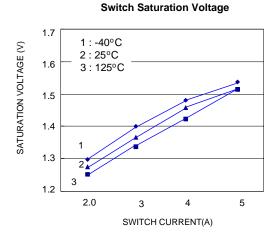

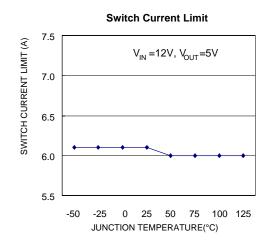

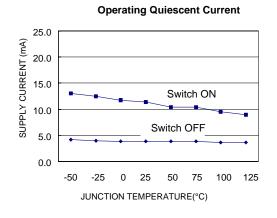


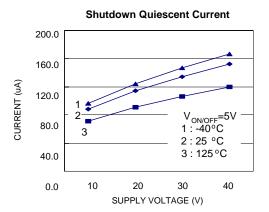




Typical Performance Characteristics (Continued)


Minimum Operating Supply Voltage

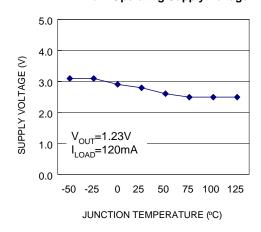


ON/OFF Threshold Voltage

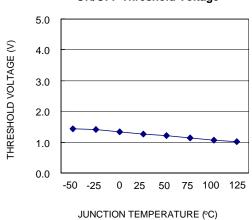


ON/OFF Pin Current (Sinking)

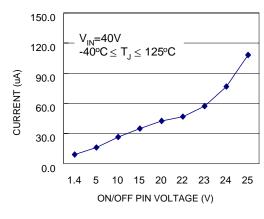

Switch Frequency

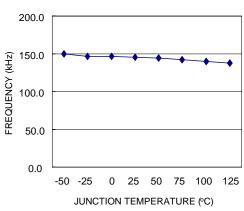


Feedback Pin Bias Current

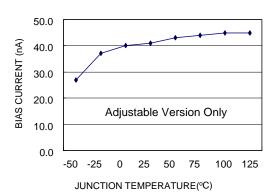




Typical Application Circuit

(1) Fixed Type Circuit

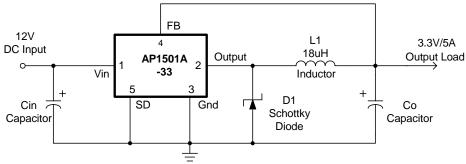

(2) Adjustable Type Circuit

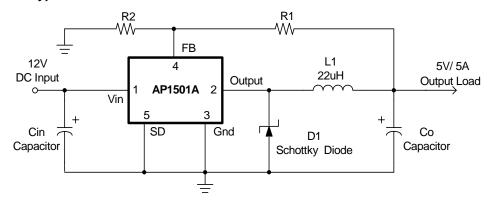


$$Vout = V_{FB} \times (1 + \frac{R1}{R2})$$

$$V_{FB} = 1.23V$$

$$R2 = 1K \sim 3K$$

(3) Delay Start Circuit

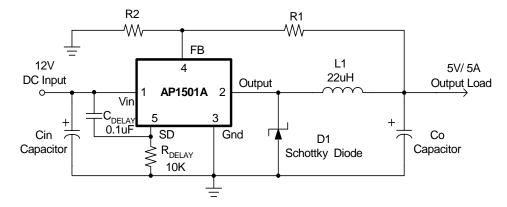



Function Description

Pin Functions

$+V_{IN}$

This is the positive input supply for the IC switching regulator. A suitable input bypass capacitor must be present at this pin to minimize voltage transients and to supply the switching currents needed by the regulator.

Ground

Circuit ground.

Output

Internal switch. The voltage at this pin switches between $(+V_{IN} - V_{SAT})$ and approximately -0.5V, with a duty cycle of approximately V_{OUT}/V_{IN} . To minimize coupling to sensitive circuitry, the PC board copper area connected to this pin should be kept a minimum.

Feedback

Senses the regulated output voltage to complete the feedback loop.

ON/OFF

Allows the switching regulator circuit to be shutdown using logic level signals thus dropping the total input supply current to approximately 150uA. Pulling this pin below a threshold voltage of approximately 1.3V turns the regulator on, and pulling this pin above 1.3V (up to a

maximum of 40V) shuts the regulator down. If this shutdown feature is not needed, the $\frac{ON}{OFF}$ pin can be wired to the ground pin or it can be left open, in either case the regulator will be in the ON condition.

Thermal Considerations

The AP1501A is available in two packages, a 5-pin surface mount TO-263.

The TO-220 package needs a heat sink under most conditions. The size of the heatsink depends on the input voltage, the output voltage, the load current and the ambient temperature. The AP1501A junction temperature rises above ambient temperature for a 5A load and different input and output voltages. The data for these curves was taken with the AP1501A (TO-220 package) operating as a buck switching regulator in an ambient temperature of 25°C (still air). These temperature rise numbers are all approximate and there are many factors that can affect these temperatures. Higher ambient temperatures require more heat sinking.

The TO-263 surface mount package tab is designed to be soldered to the copper on a printed circuit board. The copper and the board are the heat sink for this package and the other heat producing components, such as the catch diode and inductor. The PC board copper area that the package is soldered to should be at least 0.8 in², and ideally should have 2 or more square inches of 2 oz. Additional copper area improves the thermal characteristics, but with copper areas greater than approximately 6 in², only small improvements in heat dissipation are realized. If further thermal improvements are needed, double sided, multilayer PC board with large copper areas and/or airflow are recommended.

The AP1501A (TO-263 package) junction temperature rise above ambient temperature with a 2A load for various input and output voltages. This data was taken with the circuit operating as a buck switching regulator with all components mounted on a PC board to simulate the junction temperature under actual operating conditions. This curve can be used for a quick check for the approximate junction temperature for various conditions, but be aware that there are many factors that can affect the junction temperature. When load currents higher than 3A are used, double sided or multilayer PC boards with large copper areas and/or airflow might be needed, especially for high ambient temperatures and high output voltages.

For the best thermal performance, wide copper traces and generous amounts of printed circuit board copper should be used in the board layout. (Once exception to this is the output (switch) pin, which should not have large areas of copper.) Large areas of copper provide the best transfer of heat (lower thermal resistance) to the surrounding air, and moving air lowers the thermal resistance even further.


Package thermal resistance and junction temperature rise numbers are all approximate, and there are many factors that will affect these numbers. Some of these factors include board size, shape, thickness, position, location, and even board temperature. Other factors are, trace width, total printed circuit copper area, copper thickness, single or double-sided, multilayer board and the amount of solder on the board. The effectiveness of the PC board to dissipate heat also depends on the size, quantity and spacing of other components on the board, as well as whether the surrounding air is still or moving.

Furthermore, some of these components such as the catch diode will add heat to the PC board and the heat can vary as the input voltage changes. For the inductor, depending on the physical size, type of core material and the DC resistance, it could either act as a heat sink taking heat away from the board, or it could add heat to the board.




Marking Information

(1) TO263-5L

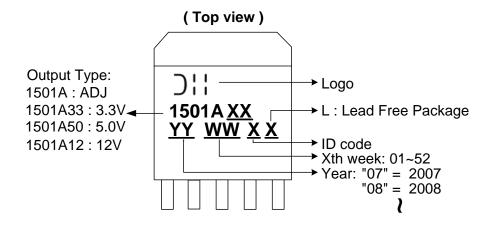


(1) TO220-5L(R)

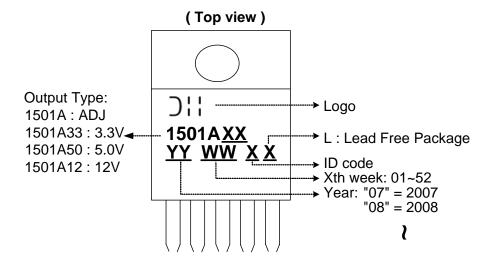




Package Information (unit:mm)

(1) Package Type: TO263-5L

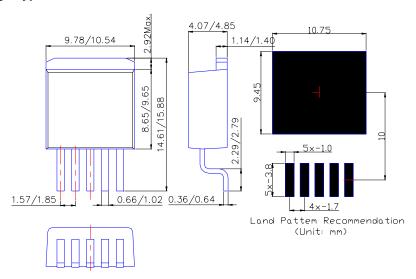


(2) Package Type: TO220-5L

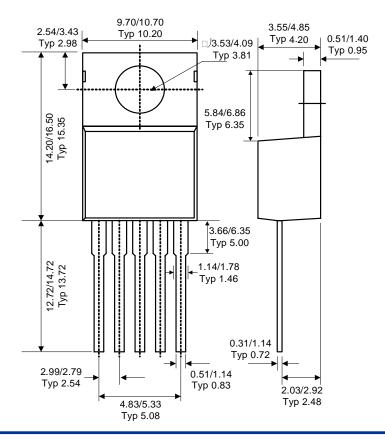



Package Information (Continued)

(3) Package Type: TO220-5L(R) Mechanical drawing

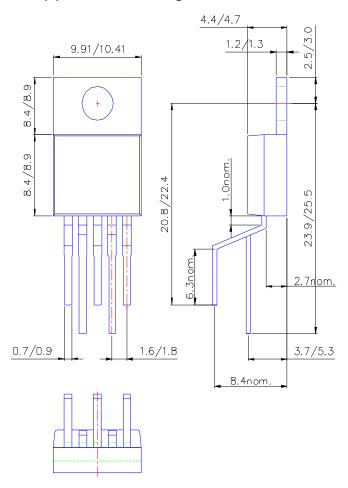

IMPORTANT NOTICE

Diodes Incorporated and its subsidiaries reserve the right to make modifications, enhancements, improvements, corrections or other changes without further notice to any product herein. Diodes Incorporated does not assume any liability arising out of the application or use of any product described herein; neither does it convey any license under its patent rights, nor the rights of others. The user of products in such applications shall assume all risks of such use and will agree to hold Diodes Incorporated and all the companies whose products are represented on our website, harmless against all damages.

LIFE SUPPORT

Diodes Incorporated products are not authorized for use as critical components in life support devices or systems without the expressed written approval of the President of Diodes Incorporated.